

Modell	Kassenrolle Best.-Nr.
ADS Anker	
ADS 25.2205, 34.1220	693212
ADS 34.4001, 39, 41	693212
ADS 34.5001	693168
ADS 40.0048, 68	693181
ADS 40.0069, 14.0104	693196
ADS 40.0070, 40.0072	693223
ADS 44.122x, 44.2220	693212
ADS 44.4001	693212
ADS 45.02xx/2661	693212
ADS 45.021x	693199
ADS 49 mit Ferndrucker	693199
ADS 49.xxxx	693181
ADS 49, 52, 53	693181
ADS 51	693212
ADS 61.1001 MP3	693181
ADS 65.8001 SR4	693199
ADS 65.8001 SR7	693178
CANON	
BP 12D, 26/D, 36D, 37DH	693171
BP 5020D, 5220D	693171
BP 5420D	693171
MP 1DH, MP37MG	693171
MP 120DH, 120DL, 121MG	693171
MP 1210D, 1211D, 1211DE	693171
MP 1211DL, 1211DLE, 1211LTSC	693171
P 1DE, DH, DTSC, P10DH	693171
P 23, DTSC	693171
P 29, DIV	693171
P 41D, 41Dii, 42DR	693171
P 4220D, 4420D	693171
CASIO	
110CR, 120CR, 150CD, 160CR, 240CR	693181
116ER, 117ER, 190ER, 220ER, 230ER	693181
CE300, KP200	693181
CE2104, 2200, 2300	693212
CE3400, 3700, 3750, 3800	693212
CE4000, 4050, 4100	693212
CE4200, 4250, 4600, 4700	693212
CE6100, CE7000	693212
DR120T, 140N, 320, 320RE, 320TEC, 420RE, 420 TEC, 420TER	693171
FR2550, 2650, 2650RE, 2650T	693171
FR5100, 5100L	693171
FR520, 5200	693171
FR620RE, FR620TEC, FR620TER	693171
BRC, HR100ER, 8TER, 8TEC, 150ER, 150RCE, 150TEC, 200TEC	693171
SA1000, 2000, 3000, 3013	693212
SA5000, 7000	693202
SE-140CR	693181
SE-G1, SE-S10, SE-S400, SE-C450	693218
SE-S3000, SE-C3500	693218
TK1200, 1300	693212
TK2200, 2300, 2700	693212
TK4000, 4000C	693212
TK4200SR, 4300	693212
TE-100, TE-2000, TE-2200, TE-2400	693218
TE-3000S, TE-4000F, TE-7000S, TE-8000F	693218
TE-M 80, TK-T 200	693218
UD-400, UP-350, 360, 371	693173
VR-100	693173
CITIZEN	
CBM 230, 231, 293	693173
CBM 210, 220, 710	693173
CX 32, 77, 121, 126, 185, 350 DP	693171
520 DP, 540 DP	693218

Modell	Kassenrolle Best.-Nr.
EPSON	
TM-H5000II, 6000	693173
TM-J2000, 2001	693202
TM-J8000	693202
TM-T88II	693173
TM-U80	693173
TM-U210, 230, 295	693202
TM-U590	693172
TM-U925, 950	693172
IBICO	
1004, 1006, 1008, 1009	693171
1202, 1222, 1232	693171
1218E, 1272E	693171
1221X, 1231X, 1232X	693171
1491X	693168
IBM	
3650, 3660, 3680, 4580	693196
4683, 4684, 4693	693196
4694, 4883	693196
5265	693172
Modell 002, 110, 111	693196
Modell 131, 160, 161	693196
LEO	
1222E, 1222EII, 1225B,	
1225BII, 1232A, 1232AII	693171
NCR	
0082	693038
0220, 1503, 2060	693170
2106, 2115, 2116	693170
2117, 2121, 2122	693170
2126	693192
2170 Kasse	693170
2170-K195, -K196	693170
2170 Thermo	693173
2170, 2173	693199
2503, 2603, 3603	693170
7052-7156	693173
7450-7155	693199
7450-7193	693173
7452-7140	693170
7452-7156	693173
7452-7193	693173
7453-7140	693170
7453-7156	693173
7453-7193	693173
9995-5201	693226
Olivetti	
Divisumma 422	693171
ECR003/N	693181
ECR100, 300	693171
ECR2100, 2200Euro	693171
ECR2300, 2400Euro	693171
ORS500, 551PRI	693196
PR45 SPF	693196
OLYMPIA	
CPD3212S	693171
CPD5212	693171
OMRON	
PR 60-00, -02	693170
PR 62-04, -14	693170
RS 1002, 1004, 1008	693181
RS 1910	693181
RS 2410, 2810	693170
RS 4000	693181

Modell	Kassenrolle Best.-Nr.
SANYO	
CX 5511	693171
CY 6300DP	693171
ECR 138, 238, 290	693181
ECR 325, 335, 338	693212
ECR 350, 365, 375	693212
ECR 380	693181
ECR 550/8	693212
ECR 568, 578	693192
ECR 568, 578	693197
ECR 6410	693212
ER 04 RP	693180
SHARP	
CS 1194, 1635	693181
CS 2630, 2635, 2770	693181
CS 4630, 4632	693181
CS 4690	693196
EL 1601, 1607, EL 1750, EL 1758V	693181
EL 1611	693171
EL 1801, 2192	693181
EL 2195, 2607	693181
EL 2615, 2626	693181
EL 2901	693181
ER 01 RP	693181
ER 04 RP	693202
ER 1077, 8700	693181
ER 1910, 1911	693170
ER 2910	693170
ER 3100, 3115	693170
ER 4100	693170
ER-A 31D	693170
ER-A 150, 170	693181
ER-A 160, 180	693194
ER-A 250, 310, 330	693170
ER-A 440, 460, 470	693170
ER-A 510, 550, 550S, 570	693170
ER-A 610, 650, 650S	693170
ER-A 670	693192
XE-A 202/203/213/212	693218
XE-A 301/303	693167
XE-A 110, 130	693181
XE-A 102D/102BD	693181
XE-A 107WH/107BK	693181
XE-A 113D/113 BD	693181
XE-A 137WH/137BK	693218
XE-A 137WH/137BK	693222
XE-A 177WH/177BK	693218
XE-A 177WH/177BK	693222
XE-A 217WH/217BK	693218
XE-A 217WH/217BK	693222
SIEMENS-NIXDORF	
8400, 8500, 8600 SB	693196
8812/1-4	693171
8812/200-800	693181
9724	693171
9725	693181
AX-7156, AX-7193	693173
BEETLE 50	693181
BEETLE 60	693181
BEETLE 60	693196
BEETLE 60	693202
BEETLE 60	693223
BEETLE 60	693180
BEETLE 60	693212
BEETLE 2000	693226
ND 35/70, ND 69	693181
ND 62, 69	693202
ND 62, 69	693180
ND 69	693212

Modell	Kassenrolle Best.-Nr.
ND 69	693223
ND 69, ND 92	693196
POS 2000/10, 20, 40, PCD	693223
POS 2000/10, 20, 40, PCD	693180
POS 2000/10, 20, 40 PCD	693202
STAR	
SCP 700	693173
TSP 550	693173
TA	
121 PD, 1121 PD, 1121PD ECO	693171
550 HD	693171
1428 PD, PD Plus	693178
4212 PD Carat, Euro, Nova	693171
6600 HD, 7600 HD	693171
CMS 240 Euro	693171
CMS 330, 340 Euro	693171
CMS 430, 440 Euro	693171
CMS 481 NLD	693171
CMS 8200	693170
CS 460	693171
TEC	
DRJUST-50, -51	693181
FR 10, FS 132	693195
FR 10, FS 132	693169
FR 21	693170
FS 1080, 1200	693170
FS 1450, 1650	693170
FS 1900, 2000	693170
KCP-1	693202
KCP-1	693180
MA 80, 104, 115	693169
MA 80, 104, 115	693195
MA 128, 132, 133	693195
MA 128, 132, 133	693169
MA 135, 136	693169
MA 136, 1300	693195
MA 140, 141	693170
MA 150, 156	693194
MA 170, 180, 186	693194
MA 191	693170
MA 196	693194
MA 205, 206	693169
MA 215, 216, 227	693169
MA 230, 290	693170
MA 305, 315	693170
MA 400, 450	693194
MA 479, 485	693194
MA 516	693170
MA 1040, 1050	693170
MA 1070, 1080	693170
MA 1100	693170
MA 1300	693169
MA 1350, 1400	693170
MA 1450, 1600	693170
MA 1650	693170
MA 1655	693192
MA 1700, 1900	693170
MA 1900 B5	693170
POS-3000	693181
ST-3600	693181
ST-4500	693181
ST-4500	693173
ST-5500	693181
TRST-53	693173
TSMS	693181